











What to do if...
What to do if...

	A tire punctures	P. 587	If you have a flat tire
	The engine does not start	P. 601	If the engine will not start
		P. 108	Engine immobilizer system
		P. 608	If the battery is discharged
	The shift lever cannot be moved out	P. 603	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 611	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 604	If you lose your keys
	The battery runs out	P. 608	If the battery is discharged
	The doors cannot be locked	P. 52	Side doors
		P. 55	Back door
	The horn begins to sound	P. 110	Alarm
	The vehicle is stuck in mud or sand	P. 614	If the vehicle becomes stuck

What to do if...



A warning light or indicator light comes on

P. 557

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 557



ABS warning light

or



P. 558



Low fuel level warning light

P. 560



SRS warning light

P. 558



Open door warning light

P. 560



Charging system warning light

P. 557



Slip indicator

P. 558



Automatic High Beam indicator light*

P. 558



Malfunction indicator lamp

or



P. 558



Driver's seat belt reminder light

P. 560



Front passenger's seat belt reminder light

P. 560



Master warning light

P. 560



Electric power steering system warning light

P. 558



Pre-collision system warning light

P. 558



Tire pressure warning light

P. 560



"AFS OFF" indicator*

P. 558

*: The light flashes to indicate a malfunction.